

 






Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	Text		Text / Goto		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Menu		Menu / Home
	1		1		Back		Back / Return
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		Down		Down
	7		7		Red		Red / Netflix / Search
	8		8		Green		Green / APP / Repeat
	9		9		Yellow		Yellow / YouTube / Repeat
	CH+		CH+ / Page+		Blue		Blue / Prime Video / Random
	0		0		SAT		Shift + 0
	Vol+		Vol+		EPG		Guide / EPG / -/-
	CH-		CH- / Page-		List		Smart / List
	Tv/R		TV/Radio /		Audio		Audio / Lang I/II



