



 



 













 

 






 





 
 
 
 


 

 
 


 


 
 



 










Original		Rechange		Original		Rechange	
	Power		Power		Up / CH +		Ch +
	Mute		Mute		Down / CH -		Down
	Play / Pause		Play		Down / CH -		Ch -
	Play / Pause		Pause		Right / Vol +		Right
	Stop		Stop		Right / Vol +		Vol +
	Rec		Rec		Left / Vol -		Left
	Info		Info		Left / Vol -		Vol -
	Red / TV/Radio		Red		OK		Ok
	Red / TV/Radio		TV/R		Menu		Menu
	Green / Media		Green		Exit		Exit
	Green / Media		Media		<<		<<
	Yellow / Audio		Yellow		>>		>>
	Yellow / Audio		Dual		<<		<<
	Blue		Blue		>>		>>
	EPG		Guide		USB		AV
	Back		Back		Fav		Pre Ch
	Up / CH +		Up		1		1





Original		Recharge	
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX		Text
	Subtitle		Subt

Original		Recharge	

