

 


 

 







 


 

 



 

 










Original		Rechange		Original		Rechange	
	Power		Power		Down/CH-		Down
	Mute		Mute		Vol+		Vol +
	1		1		Right		Right
	2		2		Left		Left
	3		3		Vol-		Vol -
	4		4		OK		Ok
	5		5		Exit		Exit
	6		6		Audio		Dual
	7		7		Red		Red
	8		8		Menu		Menu
	9		9		PgUp		Ch +
	0		0		PgDn		Ch -
	SAT		Smart		FAV		Pre Ch
	Zoom		Eject		EPG		Guide
	FAV+		>>I		Tv/Radio		TV/R
	FAV-		I<<		Green		Green
	Up/CH+		Up		Recall		Back













 
 



 









 



 



 
 
 

 

 

 



 
 
 





 

 

 



 



 

 
 

Original	Rechange	Original	Rechange
 PAUSE Yellow	 Yellow		
 PAUSE Pause	 Pause		
 INFO Blue	 Blue		
 INFO Info	 INFO		

Original	Rechange







 


Original	Rechange	Original	Rechange
 Power	 Power	 Down/CH-	 Down
 Mute	 Mute	 Vol+	 Vol +
 1	 1	 Right	 Right
 2	 2	 Left	 Left
 3	 3	 Vol-	 Vol -
 4	 4	 OK	 Ok
 5	 5	 Exit	 Exit
 6	 6	 Audio	 Dual
 7	 7	 Menu	 Menu
 8	 8	 Red	 Red
 9	 9	 PgUp	 Ch +
 0	 0	 PgDn	 Ch -
 SAT	 Smart	 FAV	 Pre Ch
 Zoom	 Eject	 EPG	 Guide
 FAV+	 >>I	 Tv/Radio	 TV/R
 FAV-	 I<<	 Green	 Green
 Up/CH+	 Up	 Recall	 Back

Original	Rechange	Original	Rechange
 Power	 Power	 Down/CH-	 Down
 Mute	 Mute	 Vol+	 Vol +
 1	 1	 Right	 Right
 2	 2	 Left	 Left
 3	 3	 Vol-	 Vol -
 4	 4	 OK	 Ok
 5	 5	 Exit	 Exit
 6	 6	 Audio	 Dual
 7	 7	 Menu	 Menu
 8	 8	 Red	 Red
 9	 9	 PgUp	 Ch +
 0	 0	 PgDn	 Ch -
 SAT	 Smart	 FAV	 Pre Ch
 Zoom	 Eject	 EPG	 Guide
 FAV+	 >>I	 Tv/Radio	 TV/R
 FAV-	 I<<	 Green	 Green
 Up/CH+	 Up	 Recall	 Back











 
 



 









 



 



 
 
 

 

 

 



 
 
 





 

 

 



 



 

 
 



Original	Rechange	Original	Rechange
 PAUSE Yellow	 Yellow		
 PAUSE Pause	 Pause		
 INFO Blue	 Blue		
 INFO Info	 DISPLAY INFO Info		







Original	Rechange	Original	Rechange
 Power	 Power	 Down/CH-	 Down
 Mute	 Mute	 Right	 Right
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Exit	 Exit
 6	 6	 Audio	 Dual
 7	 7	 Red	 Red
 8	 8	 Menu	 Menu
 9	 9	 PgUp	 Ch +
 0	 0	 PgDn	 Ch -
 SAT	 Smart	 FAV	 Pre Ch
 Zoom	 Eject	 EPG	 Guide
 FAV+	 >>I	 Tv/Radio	 TV/R
 FAV-	 I<<	 Green	 Green
 Up/CH+	 Up	 Recall	 Back



