
 




 

 





 





Original	Rechange	Original	Rechange
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift + Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow

Original	Rechange	Original	Rechange
 MUTE	 MUTE	 TV	 AUX
 MUTE	 MUTE	 DVD	 REC MODE
 1	 1	 SAT	 PLAY MODE
 2	 2	 AUX	 II
 3	 3	 ■	 ■
 4	 4	 >>>	 >>>
 5	 5	 <<<	 <<<
 6	 6	 SOUND	 AD
 7	 7	 SETTINGS	 OPT
 8	 8	 LIST	 DUAL
 9	 9	 SUBT	 PICTURE
 0	 0	 OPT	 ECO
 FAV	 Shift + Pre Ch	 3D	 TIMER
 Recall	 Pre Ch	 E-MANUAL	 REPEAT
 Game	 Media	 REPEAT	 ZOOM
 Auto	 Smart	 ZOOM	 TEXT
 Info	 Info	 TEXT	 AV



Play/Pause

