



Original		Rechange		Original		Rechange	
	Power		Power		9		9
	[≡?]		Dual		0		0
	[≡◆]/[+]/Wide		3D		PP		Pre Ch
	[≡i]/Guide		Guide		[≡]		Text
	[i]/Info		Info		Vol+		Vol +
	[≡o]		Subt		Vol-		Vol -
	[≡+]/[X]		Format		Mute		Mute
	[≡x]/[⋯]		Options		P/CH+		Ch +
	[/≡]/[*]		Smart		P/CH-		Ch -
	1		1		P<P/Swap		Back
	2		2		TV/DTV		TV/R
	3		3		AV/Source		AV
	4		4		Menu		Menu
	5		5		-/--		Shift + Guide
	6		6		Exit		Exit
	7		7		Up		Up
	8		8		Down		Down





Original	Rechange	Original	Rechange
	Right		Right
	Left		Left
	OK/Select		Ok
	Red/↑		Red
	Green/↓		Green
	Yellow		Yellow
	Blue		Blue

