 


 


 
 









 

 
 
 

 
 


 
 
 

 
 
 
 
 

 




Original	Recharge
 POWER	 Power
 DISPL. / OFF	 Shift + Power
 SLEEP	 Sleep
 TEXT	 Text
 PRESETS	 Options
 SUBTITLE	 Subt
 AUDIO	 Shift + Dual
 LANG.	 Dual
 ASPECT	 Format
 FREEZE	 Shift + Stop
 RED	 Red
 GREEN	 Green
 YELLOW	 Yellow
 BLUE	 Blue
 MENU	 Menu
 EXIT	 Exit
 UP	 Up

Original	Recharge
 LEFT	 Left
 OK	 Ok
 RIGHT	 Right
 DOWN	 Down
 GUIDE	 Guide
 INFO	 Info
 VOL+	 Vol +
 VOL-	 Vol -
 SOURCE	 AV
 FAV	 Pre Ch
 MUTE	 Mute
 P+	 Ch +
 P-	 Ch -
 MEDIA	 Media
 <<	 <<
 >>	 >>
 PLAY/PAUSE	 Play





Original		Rechange		Original		Rechange	
	PLAY/PAUSE		Pause				
	REC		Rec				
	I<<		I<<				
	>>I		>>I				
	STOP		Stop				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	RECALL		Back				
	TV/RADIO		TV/R				

