












Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 Fav / Marker / PC	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 O/I-II/Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 Red	 Red / Netflix / Search

Original	Rechange	Original	Rechange
 Power	 Power	 TV	 TV
 Info	 Info	 DVD	 DVD
 Mute	 Mute	 SAT	 SAT
 1	 1	 AUX	 AUX
 2	 2	 SLOW	 SLOW
 3	 3	 STEP-FREEZE	 STEP-FREEZE
 4	 4	 HOLD	 HOLD
 5	 5	 REC MODE	 REC MODE
 6	 6	 TUNE-	TUNE-
 7	 7	 TUNE+	TUNE+
 8	 8	 PRESET-	PRESET-
 9	 9	 PRESET+	PRESET+
 Source	 Source	 TITLE	TITLE
 0	 0	 LANG I/II	LANG I/II
 O/I-II/Audio	 O/I-II/Audio	 EQ	EQ
 Menu	 Menu	 SURROUND	SURROUND
 Exit	 Exit	 SOUND	SOUND
		 AUDIO	AUDIO
		 SUBTITLE	SUBTITLE
		 TIMER	TIMER
		 PROGRAM	PROGRAM
		 TV RADIO	TV RADIO
		 RDS	RDS
		 AV INPUT	AV INPUT
		 HOME	HOME
		ANGLE	ANGLE
		MENU	MENU
		INFO	INFO
		OK	OK
		CLEAR	CLEAR
		EXIT	EXIT
		CANCEL	CANCEL
		LIST	LIST
		SMART	SMART
		MEDIA	MEDIA
		DISPLAY	DISPLAY
		VOL+	VOL+
		CH PAGE	CH PAGE
		VOL-	VOL-
		TV	TV
		DVD	DVD
		CD-STB	CD-STB
		VIDEO	VIDEO
		TAPE	TAPE
		TUNER	TUNER
		AUX-HDD	AUX-HDD
		USB	USB
		BLUETOOTH	BLUETOOTH
		7	7
		8	8
		9	9
		GUIDE	GUIDE
		EPG	EPG
		NETFLIX	NETFLIX
		APP	APP
		YouTube	YouTube
		Prime Video	Prime Video
		SEARCH	SEARCH
		REPEAT	REPEAT
		REPEAT A-B	REPEAT A-B
		RANDOM	RANDOM
		Mandis SHOP	Mandis SHOP
		www.mandis.tv	www.mandis.tv








 





















Original	Recharge	Original	Recharge
 Green	 Green / APP / Repeat		
 >>	 >> / Tune+		
 Yellow	 Yellow / YouTube / Repeat		
 I<<	 I<< / Preset-		
 Blue	 Blue / Prime Video / Random		
 >>	 >> / Preset+		
 [=]	 Text / Goto		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 [=+]	 Zoom / Size		
 Stop/Still	 Stop / Hold		
 Radio	 TV/Radio /		
 [=♦]/[++]	 Setup / OPT /		
 [=x]	 Picture / Format		
 [=o]/Subtitle	 Subtitle / EQ		
 DMP	 D.Menu / Top		
 Rec	 Rec / Rec Mode		


















 







 



 






Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Text / Play/Pause	 Play / Slow
 Text / Play/Pause	 Pause / Step / Freeze
 Stop / Still	 Stop / Hold
 Rec	 Rec / Rec Mode
 Audio I/II	 Audio / Lang I/II
 Subtitle / [≡o]	 Subtitle / EQ
 [≡x]	 Picture / Format
 Size / Aspect	 Zoom / Size
 Sleep	 Sleep / Timer
 Radio	 TV/Radio /
 DMP	 D.Menu / Top
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle

Original	Rechange
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Back / Return
 Vol +	 Vol+
 List	 Smart / List
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Index	 Display / Media
 CH -	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Recharge	Original	Recharge
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	EPG	 Guide / EPG / -/--		
	0	 0		
	Fav	 Fav / Marker / PC		
	Red / <<	 Red / Netflix / Search		
	Green / >>	 Green / APP / Repeat		
	Yellow / <<	 Yellow / YouTube / Repeat		
	Blue / >>	 Blue / Prime Video / Random		
	Text / Play/Pause	 Shift + Play /		
	Red / <<	 Shift + Red / Netflix /		
	Green / >>	 Shift + Green / APP /		
	Yellow / <<	 Shift + Yellow / YouTube /		
	Blue / >>	 Shift + Blue / Prime		

