



Original		Recharge		Original		Recharge	
	Power		Power		Yellow		Yellow
	Play		Play		Blue		Blue
	Stop		Stop		CH+		Ch +
	Pause		Pause		CH-		Ch -
	<<		<<		Vol+		Vol +
	>>		>>		Vol-		Vol -
	I<<		I<<		Menu		Menu
	>>I		>>I		Source		AV
	TV/TXT		Text		DVB		Smart
	Cancel		Back		Exit		Exit
	Reveal		Eject		OK		Ok
	Hold		Media		Up		Up
	Size		3D		Down		Down
	Subpage		D. Menu		Right		Right
	Index		List		Left		Left
	Red		Red		1		1
	Green		Green		2		2





	Original	Recharge
3	3	3
4	4	4
5	5	5
6	6	6
7	7	7
8	8	8
9	9	9
0	0	0
-/--	-/--	SHIFT + -/-- Guide
Recall	Recall	FAV PRE-CH Pre Ch
PICTURE	Picture	SHIFT + PICTURE FORMAT Shift + Format
SOUND	Sound	SHIFT + SOUND DUAL Shift + Dual
NICAM/A2	Nicam/A2	SETTINGS OPT Options
MUTE	Mute	MUTE Mute
SLEEP	Sleep	PROG SLEEP Sleep
TV/RADIO	Tv/Radio	SEARCH TV/R TV/R
FAV	FAV	SHIFT + FAV PRE-CH Shift + Pre Ch

	Original	Recharge
FAV+	FAV+	SHIFT + + CH Shift + Ch +
FAV-	FAV-	SHIFT + - CH Shift + Ch -
PIC FORMAT	Pic Format	PICTURE FORMAT Format
SUBTITLE	Subtitle	AD SUBT Subt
TEXT	Text	SHIFT + REPEAT TEXT Shift + Text
DISPLAY	Display	DISPLAY INFO Info
LANGUAGE	Language	SOUND DUAL Dual
EPG	EPG	-/-- GUIDE Guide

