








 



 

 
 




 



 



 













 



 





 



 

 

 

 

 

 
 

 



 


 





 



 

 
 
 


 
 

 

 

 




Original	Rechange	Original	Rechange
 Power	 Power	 Blue	 Blue
 Source	 AV	 1	 1
 Internet	 Smart	 2	 2
 Sleep	 Sleep	 3	 3
 Presets	 Subt	 4	 4
 Multimedia	 Media	 5	 5
 Rec	 Rec	 6	 6
 Play	 Play	 7	 7
 Pause	 Pause	 8	 8
 Stop	 Stop	 9	 9
 <<	 <<	 0	 0
 >>	 >>	 TV	 TV/R
 Lang	 Dual	 Return	 Shift + Back
 [=]	 Pre Ch	 Menu	 Menu
 Red	 Red	 Q.Menu	 D. Menu
 Green	 Green	 Back	 Back
 Yellow	 Yellow	 Exit	 Exit





Original		Rechange		Original	Rechange
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		
	P+		Ch +		
	p-		Ch -		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	OK		Ok		
	Wide		Format		
	Folder [*]		Eject		
	i		Info		
	*/o		Options		
	*/o.		3D		
	Text		Text		
	[]≡		Guide		

