



Original	Rechange	Original	Rechange
Power	Power	Vol -	Vol -
Mute	Mute	CH +	Ch +
1	1	CH -	Ch -
2	2	Exit	Exit
3	3	Red / USB Left	Red
4	4	Red / USB Left	Shift + Left
5	5	Green / USB	Green
6	6	Green / USB	Shift + Down
7	7	Yellow / USB Up	Yellow
8	8	Yellow / USB Up	Shift + Up
9	9	Blue / USB Right	Blue
0	0	Blue / USB Right	Shift + Right
10+	Shift + Guide	Up	Up
SUBTL	Subt	Left	Left
EPG	Guide	Enter	Ok
Menu	Menu	Right	Right
Vol +	Vol +	Down	Down

Original	Rechange	Original	Rechange
Power	Power	Vol -	Vol -
Mute	Mute	CH +	Ch +
1	1	CH -	Ch -
2	2	Exit	Exit
3	3	Red / USB Left	Red
4	4	Red / USB Left	Shift + Left
5	5	Green / USB	Green
6	6	Green / USB	Shift + Down
7	7	Yellow / USB Up	Yellow
8	8	Yellow / USB Up	Shift + Up
9	9	Blue / USB Right	Blue
0	0	Blue / USB Right	Shift + Right
10+	Shift + Guide	Up	Up
SUBTL	Subt	Left	Left
EPG	Guide	Enter	Ok
Menu	Menu	Right	Right
Vol +	Vol +	Down	Down




 

 
 


 
 
 
 
 

 
 
 


 



 
 





 



 

Original	Rechange	Original	Rechange
PREV QV	SETTINGS OPT Options	SIZE	Size
NEXT FAV	FAV PRE-CH Pre Ch	ESCAPE PROG MIX	Prog / Mix
SOURCE	TIMER AV AV	ESCAPE PROG MIX	Prog / Mix
SLEEP	PROG SLEEP Sleep	RETURN SUBPG	Return / SUBPG
PICTURE	SHIFT + PICTURE FORMAT Shift + Format	REPEAT REVEAL	Repeat / Reveal
SOUND	SHIFT + SOUND DUAL Shift + Dual	SEARCH HOLD	Search / Hold
DISPLAY	DISPLAY INFO Info		
TOP I/II	SOUND DUAL Dual		
REV FAV-	<<		
FWD FAV+	>>		
TEXT USR/CR	APP MEDIA Media		
TEXT USR/CR	REPEAT TEXT Text		
INDEX	PLAY MODE Play		
INDEX	SHIFT + DISPLAY INFO Shift + Info		
INDEX	PAUSE Pause		
CANCEL	STOP Stop		
CANCEL	SHIFT + CLEAR EXIT Shift + Exit		

Original	Rechange
PICTURE FORMAT	Format
HOME SMART	Smart
SHIFT + PROG SLEEP	Shift + Sleep
RETURN BACK	Back
SHIFT + RETURN BACK	Shift + Back
SEARCH TV/R	TV/R





Original	Recharge	
		Power
		AV
		Exit
		Menu
		Dual
		Media
		Options
		Text
		TV/R
		1
		2
		3
		6
		5
		4
		7
		8

Original	Recharge	
		9
		0
		Guide
		Up
		Right
		Ok
		Left
		Down
		Subt
		Pause
		Rec
		<<
		Play
		>>
		Shift + Media
		Shift + Dual
		Shift + 6

