



Original		Rechange		Original		Rechange	
	Power		Power		Mute		Mute / Dimmer
	Tv/AV		AV / Input / RDS		Vol-		Vol-
	1		1		Up		Up
	2		2		CH+		CH+ / Page+
	3		3		Vol+		Vol+
	Eject		Eject / Surround		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		Sys Menu		D.Menu / Top
	Play/Pause		Play / Slow		CH-		CH- / Page-
	7		7		Down		Down
	8		8		Display		Display / Media
	9		9		Picture		Picture / Format
	Stop		Stop / Hold		Sound		Sound / Title
	0		0		Timer		Sleep / Timer
	-/-		Shift + Guide / EPG / -/-		Nicam/A2		Audio / Lang I/II
	Return		Back / Return		Lan/Prog-		Shift + CH- / Page-





	Original	Recharge	
	Zoom/Prog+		Shift + CH+ /
	Sub		Subtitle / EQ
	Goto		Text / Goto
	SET/Tv/TXT/DVB-		Setup / OPT /
	Menu/Cancel/Tv Format		Menu / Home
	ANG/Reveal/Exit		Exit / Cancel / Clear
	Title/info		Shift + Sound / Title
	<</Hold/Languag		<< / Tune-
	>>/Size/Text		>> / Tune+
	<</Subpage		<< / Preset-
	FAV		Fav / Marker / PC
	>> /Index		>> / Preset+
	EPG		Guide / EPG / -/--
	Red/Pro		Red / Netflix / Search
	Tv/Radio		TV/Radio /
	Green/Slow/Audio		Green / APP / Repeat
	Yellow/Rep/Freeze		Yellow / YouTube / Repeat

	Original	Recharge	
	Blue/A-B/Subtitle		Blue / Prime Video / Random

