



Original	Rechange
 Power	 Power
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 CABLE	 Shift + Yellow
 SAT	 Shift + Blue
 CH Sel	 TV/R
 CH/Level Up	 Ch +
 CH/Level Down	 Ch -
 SPK SET	 Exit
 PLII PARA.	 D. Menu
 Adjust -	 Shift + Down
 Adjust +	 Shift + Up
 Mute	 Mute

Original	Rechange
 Vol+	 Vol +
 Vol-	 Vol -
 Auto	 Subt
 DSP -	 Shift + Left
 DSP +	 Shift + Right
 Stereo	 Dual
 Setup / OSD	 Options
 Menu / T.Tone	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Display / Sleep	 Info
 Display / Sleep	 Sleep
 Return /	 Back
 Stop / P.Scan	 Stop





Original	Recharge
 << / Tune -	 <<
 >> / Tune +	 >>
 I<< / Preset -	 I<<
 >>I / Preset +	 >>I
 7CH Dir	 ECO 3D 3D
 1 / Tuner	 1 1
 2 / CD	 2 2
 3 / AUX	 3 3
 4 / Tape	 4 4
 5	 5 5
 6 / Video 1	 6 6
 7 / Video 2	 7 7
 8 / Video 3	 8 8
 9	 9 9
 0	 0 0
 AUX Power /	 SHIFT +  Shift + Power
 AUX Rec	 SHIFT +  Shift + Rec

Original	Recharge
 AUX Pause	 SHIFT +  Shift + Pause
 AUX Play	 SHIFT +  Shift + Play
 AUX Stop	 SHIFT +  Shift + Stop
 AUX <<	 SHIFT +  Shift + <<
 AUX >>	 SHIFT +  Shift + >>
 AUX >>I	 SHIFT +  Shift + >>I
 AUX I<<	 SHIFT +  Shift + I<<







Original	Recharge	Original	Recharge
 AUDIO	 Red	 TV 3	 3
 CD	 Green	 TV 4	 4
 AUX	 Yellow	 TV 5	 5
 TV	 Blue	 TV 6	 6
 VCR	 Shift + Red	 TV 7	 7
 DVD	 Shift + Green	 TV 8	 8
 CABLE	 Shift + Yellow	 TV 9	 9
 SAT	 Shift + Blue	 TV 0	 0
 TV Power	 Power	 CABLE Power	 Shift + Power
 TV CH +	 Ch +	 CABLE CH/Level +	 Shift + Ch +
 TV CH -	 Ch -	 CABLE CH/Level -	 Shift + Ch -
 TV CH Sel.	 Media	 CABLE CH Sel.	 Shift + Smart
 TV Mute	 Mute	 CABLE Mute	 Shift + Mute
 TV Volume +	 Vol +	 CABLE Volume	 Shift + Vol +
 TV Volume -	 Vol -	 CABLE Volume -	 Shift + Vol -
 TV 1	 1	 CABLE 1	 Shift + 1
 TV 2	 2	 CABLE 2	 Shift + 2






 



 

 
 
 

 


 

 



 

 

 


 
 












 

 

 





 



 



 


 



 

	Original	Rechange	
	CABLE 3	+  Shift + 3	
	CABLE 4	+  Shift + 4	
	CABLE 5	+  Shift + 5	
	CABLE 6	+  Shift + 6	
	CABLE 7	+  Shift + 7	
	CABLE 8	+  Shift + 8	
	CABLE 9	+  Shift + 9	
	CABLE 0	+  Shift + 0	

Original	Rechange





 

 


 


 


Original		Rechange		Original		Rechange	
	AUDIO		Red		DVD Right		Right
	CD		Green		DVD Down		Down
	AUX		Yellow		DVD Display		Info
	TV		Blue		DVD Pause		Pause
	VCR		Shift + Red		DVD Play		Play
	DVD		Shift + Green		DVD Stop		Stop
	SAT		Shift + Blue		DVD <<		<<
	CABLE		Shift + Yellow		DVD >>		>>
	DVD Power		Power		DVD I<<		I<<
	DVD Menu		Menu		DVD >>I		>>I
	DVD Audio Sel.		Dual		DVD 1		1
	DVD Subtitle		Subt		DVD 2		2
	DVD Zoom		3D		DVD 3		3
	DVD OSD /		Format		DVD 4		4
	DVD Up		Up		DVD 5		5
	DVD Left		Left		DVD 6		6
	DVD Enter		Ok		DVD 7		7






 



 

 
 






 
 


 
 


 
 



 

















 







 



 



 
 


 
 
	Original	Recharge	
	DVD 8	 8	8
	DVD 9	 9	9
	DVD 0	 0	0
	SAT Power	 + 	Shift + Power
	SAT CH +	 + 	Shift + Ch +
	SAT CH -	 + 	Shift + Ch -
	SAT CH Sel.	 + 	Shift + Media
	SAT Mute	 + 	Shift + Mute
	SAT Volume +	 + 	Shift + Vol +
	SAT Volume -	 + 	Shift + Vol -
	SAT 1	 + 	Shift + 1
	SAT 2	 + 	Shift + 2
	SAT 3	 + 	Shift + 3
	SAT 4	 + 	Shift + 4
	SAT 5	 + 	Shift + 5
	SAT 6	 + 	Shift + 6
	SAT 7	 + 	Shift + 7

	Original	Recharge	
	SAT 8	 + 	Shift + 8
	SAT 9	 + 	Shift + 9
	SAT 0	 + 	Shift + 0







Original		Rechange		Original		Rechange	
	AUDIO		Red		CD 5		5
	CD		Green		CD 6		6
	AUX		Yellow		CD 7		7
	TV		Blue		CD 8		8
	VCR		Shift + Red		CD 9		9
	SAT		Shift + Blue		CD 0		0
	CABLE		Shift + Yellow		VCR Power		Shift + Power
	DVD		Shift + Green		VCR CH Sel.		Shift + Media
	CD Pause		Pause		VCR Rec		Shift + Rec
	CD Play		Play		VCR Play		Shift + Play
	CD Stop		Stop		VCR Mute		Shift + Mute
	CD I<<		I<<		VCR >>		Shift + >>
	CD >>I		>>I		VCR <<		Shift + <<
	CD 1		1		VCR Volume -		Shift + Vol -
	CD 2		2		VCR Volume +		Shift + Vol +
	CD 3		3		VCR CH+		Shift + Ch +
	CD 4		4		VCR CH-		Shift + Ch -





	Original	Recharge		Original	Recharge
	VCR Pause	+	Shift + Pause		
	VCR Stop	+	Shift + Stop		
	VCR 1	+	Shift + 1		
	VCR 2	+	Shift + 2		
	VCR 3	+	Shift + 3		
	VCR 4	+	Shift + 4		
	VCR 5	+	Shift + 5		
	VCR 6	+	Shift + 6		
	VCR 7	+	Shift + 7		
	VCR 8	+	Shift + 8		
	VCR 9	+	Shift + 9		
	VCR 0	+	Shift + 0		

	Original	Recharge

