






 





 



 
 


 

 




 


 


 






 









 


 


Original		Recharge		Original		Recharge	
	Power		Power		PIP		Guide
	AV		AV		TINT		3D
	Aux		Shift + AV		*		Options
	Mute		Mute		○		Shift + Options
	1		1		i		Subt
	2		2		Fa		Dual
	3		3		Sol		Shift + Dual
	4		4		←•→		Shift + Smart
	5		5		i		Info
	6		6		Text		Text
	7		7		TV		TV/R
	8		8		Up / P+		Up
	9		9		Up / P+		Ch +
	0		0		Down / P-		Down
	P/C / B-R		Pre Ch		Down / P-		Ch -
	HIFI M+1		Smart		Right / Vol+		Right
	•\•		Media		Right / Vol+		Vol +





Original	Recharge	Original	Recharge
 Left / Vol-	 Left		
 Left / Vol-	 Vol -		
 OK	 Ok		
 Reveal	 Menu		
 Sleep	 Sleep		
 Text Cancel	 Exit		
 +1 Input	 Shift + Media		
 Mix	 Shift + Text		
 Red / Text Size	 Red		
 Green / Exit	 Green		
 Yellow / Stop / PC-	 Yellow		
 Blue / 0100 / PC+	 Blue		

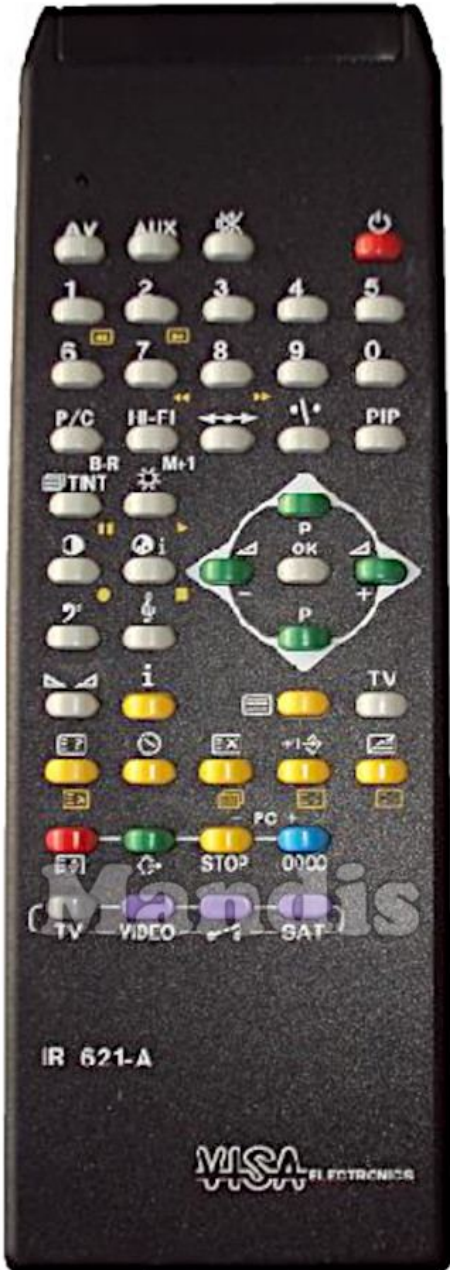