





 





 





 





 



 

 












 









 


 



 
















Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	1		1		Up		Up
	2		2		Down		Down
	3		3		Left		Left
	4		4		Right		Right
	5		5		Vol+		Vol+
	6		6		OK		OK
	7		7		Vol-		Vol-
	8		8		CH+		CH+ / Page+
	9		9		Green		Green / APP / Repeat
	0		0		Audio		Audio / Lang I/II
	Tv/Radio		TV/Radio /		CH-		CH- / Page-
	Video		Shift + 4 4		Blue		Blue / Prime Video / Random
	i		Info / Angle		TTX		Text / Goto
	L/R		Picture / Format		Red		Red / Netflix / Search
	Play/Pause		Play / Slow		EPG		Guide / EPG / -/-





Original		Rechange		Original		Rechange	
	FAV		Fav / Marker / PC				
	Yellow		Yellow / YouTube / Repeat				
	Subtitle		Subtitle / EQ				

