



| Original                                                                                 | Recharge                                                                                                  |
|------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  Power  |  Power                   |
|  1      |  1                       |
|  2      |  2                       |
|  3      |  3                       |
|  4      |  4                       |
|  5      |  5                       |
|  6      |  6                       |
|  7      |  7                       |
|  8      |  8                       |
|  9     |  9                      |
|  Menu |  Menu / Home           |
|  0    |  0                     |
|  Exit |  Exit / Cancel / Clear |
|  Vol+ |  Vol+                  |
|  Mute |  Mute / Dimmer         |
|  CH+  |  CH+ / Page+           |
|  Vol- |  Vol-                  |

| Original                                                                                    | Recharge                                                                                               |
|---------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
|  Back    |  Back / Return      |
|  Fav     |  Fav / Marker / PC  |
|  CH-     |  CH- / Page-        |
|  Up      |  Up                 |
|  Info    |  Info / Angle       |
|  Left    |  Left               |
|  OK      |  OK                 |
|  Right   |  Right              |
|  Guide   |  Guide / EPG / -/-- |
|  TV     |  Display / Media   |
|  Down  |  Down             |
|  VOD   |  Smart / List     |
|  Radio |  TV/Radio /       |
|  HDD   |  Shift + 7        |
|  HDD   |  AV / Input / RDS |
|  <<    |  << / Tune-       |
|  Play  |  Play / Slow      |



