 
 


 




 





 

 

 

 

 









Original	Recharge	Original	Recharge
 Power	 Power	 >>	 >> / Tune+
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 Red	 Red / Netflix / Search	 Up	 Up
 Green	 Green / APP / Repeat	 Back	 Back / Return
 Yellow	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 OK	 OK
 Internet	 Smart / List	 Right	 Right
 Source	 AV / Input / RDS	 i	 Info / Angle
 Lang	 Audio / Lang I/II	 Down	 Down
 Tv/Radio	 TV/Radio /	 Exit	 Exit / Cancel / Clear
 Subtitle	 Subtitle / EQ	 Vol+	 Vol+
 LIB	 Picture / Format	 P::P	 Display / Media
 Rec	 Rec / Rec Mode	 PR+	 CH+ / Page+
 Stop	 Stop / Hold	 Vol-	 Vol-
 <<	 << / Tune-	 FAV	 Fav / Marker / PC
 Play	 Play / Slow	 PR-	 CH- / Page-
 Pause	 Pause / Step / Freeze	 1	 1





Original		Recharge	
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	Guide		Guide / EPG / -/--

Original	Recharge

