



Original		Rechange		Original		Rechange	
	Power		Power		P:P		Pre Ch
	Mute		Mute		EPG		Guide
	HDMI		AV		Vol+		Vol +
	FAV		Shift + Pre Ch		Vol-		Vol -
	Tv/Radio		TV/R		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Info		Info
	3		3		Exit		Exit
	4		4		Menu		Menu
	5		5		Back		Back
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	Media		Media		Rec		Rec
	LIB		Smart		Play		Play





Original		Recharge		Original		Recharge	
	Stop		Stop				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Text		Text				
	Subt.		Subt				
	Audio		Dual				
	Opt.		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

