



Original	Rechange
Power	Power
<<	<< / Tune-
>>	>> / Tune+
Stop	Stop / Hold
Wide	Picture / Format
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow / ><	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Rechange
Menu	Menu / Home
9	9
0/AV	AV / Input / RDS
0/AV	0
i	Info / Angle
Up	Up
Cancel	Shift + Exit / Cancel / Clear
Left	Left
Right	Right
Exit	Exit / Cancel / Clear
Down	Down
OK	OK
Play	Play / Slow
Pause	Pause / Step / Freeze
Lang(AD)	Audio / Lang I/II
Subt.	Subtitle / EQ
FAV	Fav / Marker / PC



