







| Original | Rechange |
|---|---|
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  AUX |  Shift + 7 |
|  USB |  Shift + 8 |
|  Card |  Shift + 4 |
|  DVD |  Shift + 2 |
|  Tuner |  Shift + 6 |
|  Tape |  Shift + 5 |

| Original | Rechange |
|--|---|
|  OSD/Info |  Info / Angle |
|  Prog |  TV/Radio / |
|  Setup |  Setup / OPT / |
|  Menu |  Menu / Home |
|  Audio |  Audio / Lang I/II |
|  Title |  Shift + Sound / Title |
|  Subtitle |  Subtitle / EQ |
|  Timer |  Shift + Sleep / Timer |
|  +10 |  Guide / EPG / -/- |
|  Sleep |  Sleep / Timer |
|  Play |  Play / Slow |
|  Clock |  Back / Return |
|  Pause |  Pause / Step / Freeze |
|  Enter |  OK |
|  Up/Preset+ |  Up |
|  Down/Preset- |  Down |
|  >>/Tun+ |  >> / Tune+ |





| Original | Rechange |
|--|---|
|  <</Tun- |  << / Tune- |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  Stop |  Stop / Hold |
|  Repeat |  Green / APP / Repeat |
|  Goto |  Text / Goto |
|  Rec |  Rec / Rec Mode |
|  Vol- |  Vol- |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  Demo |  Picture / Format |
|  EQ |  Shift + Subtitle / EQ |
|  Bass |  Shift + Audio / Lang I/II |
|  St/Mono |  Sound / Title |
|  Bookmark |  Display / Media |
|  Intro |  D.Menu / Top |
|  Rand |  Blue / Prime Video / Random |

| Original | Rechange |
|---|--|
|  RDS/A-B |  AV / Input / RDS |
|  Zoom |  Zoom / Size |
|  P.Scan |  Eject / Surround |
|  Angle |  Shift + Info / Angle |
|  Step |  Shift + Pause / Step / |
|  Slow |  Shift + Play / |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

