



Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 Guide / EPG / -/--
 0	 0
 Recall	 Fav / Marker / PC
 YouTube	 Shift + Yellow / YouTube / REPEAT A-B
 Vudu	 Shift + Green / APP / REPEAT
 Pandora	 Shift + Blue / Prime Video / RANDOM

Random

Original	Recharge
 Netflix	 Shift + Red / Netflix /
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Vol-	 Vol-
 Aspect	 Zoom / Size
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 TV	 TV/Radio /
 <<	 << / Tune-





Original	Recharge	Original	Recharge
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Red/Info		Red / Netflix / Search
	Green/Freeze		Green / APP / Repeat
	Yellow/ADD/Erase		Yellow / YouTube / Repeat
	Blue/FAV		Blue / Prime Video / Random
	V-Chip		Eject / Surround
	CC		Subtitle / EQ
	MTS		Info / Angle
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	CH.List		Smart / List

