 

 

 

 



 

 

 



 

 

 

 

 

 

 








 
 



 



 

 





 

 

 

 
 












Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		P+		CH+ / Page+
	1		1		P-		CH- / Page-
	2		2		OK		OK
	3		3		Menu		Menu / Home
	4		4		Back		Back / Return
	5		5		Exit		Exit / Cancel / Clear
	6		6		Q.Menu		D.Menu / Top
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	[TV]		TV/Radio /		i		Info / Angle
	Internet		Smart / List		EPG		Guide / EPG / -/-
	↔		Fav / Marker / PC		TXT		Text / Goto
	Mute		Mute / Dimmer		Lang.		Audio / Lang I/II
	Vol+		Vol+		Subt.		Subtitle / EQ





Original		Recharge		Original		Recharge	
	Red		Red / Netflix / Search				
	[>]		Picture / Format				
	[+]		Zoom / Size				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	*1/O		Shift + 1				
	*2/Q		Shift + 2				
	Blue		Blue / Prime Video / Random				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	<<		<< / Tune-				
	Stop		Stop / Hold				

