


 

 




 

 





Original		Recharge		Original		Recharge	
	Standby		Power		Tv/Radio		TV/R
	Source		AV		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Mute		Mute
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		Menu		Menu
	6		6		Exit		Exit
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	[ *]/Display		Info		Enter		Ok
	Recall		Back		TXT		Text
	Freeze		Options		Play		Play
	P.Mode		Format		Pause/Time Shift		Pause
	S.Mode		Dual		Stop/EPG		Stop





Original		Rechange	
	Record		Rec
	<</Index		<<
	>>/Hold		>>
	I<</Reveal		I<<
	>>I/Subpage		>>I
	Mix/Fav List		Pre Ch
	Size/Subtitle		Subt
	Cancel/Audio		3D
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Original		Rechange	

