















































 





 




 












Original	Rechange	Original	Rechange
	Power		Power
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	M		Menu / Home
	[i]		Info / Angle
	OK		OK
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PP		Back / Return
	0		0
	-/--		Guide / EPG / -/--
	P<P		Fav / Marker / PC
	P/CH-		CH- / Page-
	P/CH+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Mute		Mute / Dimmer
	I-II		Audio / Lang I/II
	TV		Smart / List
	AV		AV / Input / RDS
	Red/Sound		Red / Netflix / Search
	Red/Sound		Sound / Title
	Green/Picture		Green / APP / Repeat
	Green/Picture		Picture / Format
	Yellow/Feature		Yellow / YouTube / Repeat



