

































 

 









	Original	Rechange	Original	Rechange
	Power	 Power		Right
	Mute	 Mute / Dimmer		OK
	Shuffle	 Blue / Prime Video / Random		Esc
	[/]	 >> / Preset+		Snap Shot
	1	 1		CH+ / Page+
	2	 2		CH- / Page-
	3	 3		Vol+
	4	 4		Vol-
	5	 5		Pause / Step / Freeze
	6	 6		Rec / Rec Mode
	7	 7		Stop / Hold
	8	 8		
	9	 9		
	0	 0		
	Up	 Up		
	Down	 Down		
	Left	 Left		

