 
 











Original	Rechange
 Power	 Power
 V-Mode	 D.Menu / Top
 Mute	 Mute / Dimmer
 SAT	 Shift + 0
 SAT	 Display / Media
 TV / AV	 AV / Input / RDS
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 FAV	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 Pause	 Pause / Step / Freeze
 7	 7

Original	Rechange
 8	 8
 9	 9
 Page +	 Shift + CH+ /
 TV / Radio	 TV/Radio /
 0	 0
 <-- PR	 Back / Return
 Page -	 Shift + CH- /
 PR+	 CH+ / Page+
 PR+	 Up
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK / List	 Smart / List
 OK / List	 OK
 Right / Vol +	 Right
 Right / Vol +	 Vol+
 PR-	 CH- / Page-
 PR-	 Down



