



| Original | | Rechange | | Original | | Rechange | |
|----------|----------|----------|-------------------|----------|--------|----------|-------------------------|
| | Power | | Power | | Text | | Text / Goto |
| | 1 | | 1 | | Live | | Display / Media |
| | 2 | | 2 | | VOD | | Smart / List |
| | 3 | | 3 | | Series | | Shift + Display / Media |
| | 4 | | 4 | | WEB TV | | Shift + Smart / List |
| | 5 | | 5 | | Menu | | Menu / Home |
| | 6 | | 6 | | Up | | Up |
| | 7 | | 7 | | Exit | | Exit / Cancel / Clear |
| | 8 | | 8 | | Left | | Left |
| | 9 | | 9 | | OK | | OK |
| | Recall | | Back / Return | | Right | | Right |
| | 0 | | 0 | | EPG | | Guide / EPG / -/-- |
| | SAT | | Shift + 0 | | Down | | Down |
| | SAT | | AV / Input / RDS | | Info | | Info / Angle |
| | TV/Radio | | TV/Radio / | | Vol+ | | Vol+ |
| | Audio | | Audio / Lang I/II | | Fav | | Fav / Marker / PC |
| | Subtitle | | Subtitle / EQ | | Page+ | | CH+ / Page+ |





| Original | Recharge |
|-------------|-----------------------------|
| Vol- | Vol- |
| Mute | Mute / Dimmer |
| Page- | CH- / Page- |
| Red / F1 | Red / Netflix / Search |
| Green / F2 | Green / APP / Repeat |
| Yellow / F3 | Yellow / YouTube / Repeat |
| Blue / IPTV | Blue / Prime Video / Random |
| Option | Setup / OPT / |
| V-Format | Picture / Format |
| Resolution | Zoom / Size |
| Sleep | Sleep / Timer |
| << | << / Tune- |
| >> | >> / Tune+ |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| Play | Play / Slow |
| Pause | Pause / Step / Freeze |

| Original | Recharge |
|----------|----------------|
| Stop | Stop / Hold |
| Rec | Rec / Rec Mode |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

