




 

 









Original	Rechange
	Mute / Dimmer
	Zoom / Size
	Power
	Info / Angle
	Picture / Format
	Sound / Title
	Pause / Step / Freeze
	Sleep / Timer
	Shift + D.Menu / Top Menu
	Shift + Info / Angle
	Shift + YouTube / YouTube / REPEAT A-B
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+
	Menu / Home
	Up

Original	Rechange
	AV / Input / RDS
	Left
	OK
	Right
	D.Menu / Top
	Down
	Exit / Cancel / Clear
	Guide / EPG / -/-
	<< / Tune-
	>> / Tune+
	Rec / Rec Mode
	Text / Goto
	Play / Slow
	Stop / Hold
	Shift + Down
	I<< / Preset-
	>>I / Preset+





Original		Recharge	
	+/Goto	+	Shift + Up
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green/Mode		Green / APP / Repeat
	Yellow/Zoom		Yellow / YouTube / Repeat
	Blue/Schedule		Blue / Prime Video / Random

Original		Recharge	

