

 













 

 

 


 
 

 

 

 







Original	Rechange
 Standby/On	 Power
 1/5Beam	 1
 2/ST+3Beam	 2
 3/3Beam	 3
 4/Stereo	 4
 5/Target	 5
 6	 6
 7/Music	 7
 8/Movie	 8
 9/Vol Mode	 9
 0/Sports	 0
 +10/Off	 Guide / EPG / -/--
 Surround	 Eject / Surround
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

Original	Rechange
 AUX	 Smart / List
 Enter	 OK
 Menu	 Menu / Home
 Return	 Back / Return
 Test	 Text / Goto
 CH Level	 Info / Angle
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 (o)	 Sound / Title
 Input Mode	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Power AUX	 Shift + Power
 1 AUX	 Shift + 1
 2 AUX	 Shift + 2
 3 AUX	 Shift + 3
 4 AUX	 Shift + 4





	Original	Rechange	
TARGET	5 AUX	SHIFT + 5	Shift + 5
	6 AUX	SHIFT + 6	Shift + 6
MUSIC	7 AUX	SHIFT + AUX - HDD	Shift + 7
MOVIE	8 AUX	SHIFT + USB	Shift + 8
VOL. MODE	9 AUX	SHIFT + BLUETOOTH	Shift + 9
SPORTS	0 AUX	SHIFT + HDMI - SAT	Shift + 0

	Original	Rechange





Original	Rechange
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
CH+	CH+ / Page+
CH-	CH- / Page-
Tv Vol+	Vol+
Tv Vol-	Vol-
Tv Input	AV / Input / RDS
Tv Mute	Mute / Dimmer

Original	Rechange
Input 1	Smart / List
Input 2	Display / Media





Original		Rechange	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/--
	Menu		Menu / Home
	Return		Back / Return
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+

Original		Rechange	
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	STB		Shift + 3





Original		Rechange	
POWER	Power	POWER	Power
5BEAM	1	TV	1
ST+3BEAM	2	DVD	2
3BEAM	3	CD - STB	3
STEREO	4	VIDEO	4
TARGET	5	TAPE	5
	6	TUNER	6
MUSIC	7	AUX - HDD	7
MOVIE	8	USB	8
VOL. MODE	9	BLUETOOTH	9
SPORTS	0	HDMI - SAT	0
	Play	SLOW	Play / Slow
	<<	TUNE-	<< / Tune-
	>>	TUNE+	>> / Tune+
	Stop	HOLD	Stop / Hold
	Pause	STEP - FREEZE	Pause / Step / Freeze

Original		Rechange	

