



Original	Recharge
Power	Power
Time/Level	Shift + Sleep / Timer
DSP PRG+	CH+ / Page+
Set Menu	Menu / Home
DSP-	Shift + CH- /
DSP+	Shift + CH+ /
Test	Text / Goto
DSP PRG-	CH- / Page-
Effect	Picture / Format
TAPE ● /	Rec / Rec Mode
TAPE Deck A/B	Green / APP / Repeat
TAPE ◀◀	Sound / Title
TAPE ▶▶	Shift + Play /
TAPE ■	Audio / Lang I/II
TAPE DIR A	Yellow / YouTube / Repeat
TAPE ■	Shift + Stop /
TAPE DIR B	Shift + Yellow / YouTube / Repeat

Original	Recharge
CD Disc Skip	Shift + 3
CD ◀◀	Shift + << /
CD ▶▶	Play / Slow
CD ■	Shift + >> /
CD ◀◀	<< / Tune-
CD ■ / ■	Stop / Hold
CD ▶▶	>> / Tune+
TUNER Preset-	I<< / Preset-
TUNER Preset+	>>I / Preset+
TUNER	Shift + 6
CD	3
Tuner	6
TAPE/MD	5
DVD/LD	2
SAT/D-TV	Eject / Surround
VCR	4
AUX	7



