



Original	Recharge
Standby	Shift + Power
System Power	Power
CD	Shift + 3
MD / CD-R	Shift + TV/Radio / Program
TUNER	Shift + 6
Sleep	Sleep / Timer
DVD	Shift + 2
DTV/CBL	Back / Return
V-AUX	Shift + 7
Multi CH In	Shift + Smart / List
VCR	Shift + 4
Volume+	Vol+
Volume-	Vol-
Mute	Mute / Dimmer
Stereo	Shift + 1
1	1
2	2

Original	Recharge
HALL	Shift + Display / Media
3	3
Jazz	Zoom / Size
4	4
Rock	Picture / Format
Music	Smart / List
5	5
Entertain	D.Menu / Top
6	6
7	7
TV Thtr	TV/Radio /
Movie	Display / Media
8	8
Dolby DTS	Sound / Title
9	9
Night	Info / Angle
0	0





	Original	Recharge
	EX/ES	AV / Input / RDS
	Straight / Effect	Text / Goto
	Level	Menu / Home
	Preset/CH+	CH+ / Page+
	Up	
	Set Menu	Setup / OPT /
	A/B/C/D/E	Yellow / YouTube / Repeat
	Left	
	Enter	
	Select	Shift + OK
	Right	
	Preset/CH-	CH- / Page-
	Down	

Original	Recharge

