 

 


 









 

 

 






 



 
 

 
 





 



 


 










 
 



 







 


 
 




 

 
 
 


 

 




Original		Recharge		Original		Recharge	
	Power		Power		Scene 1		Shift + Red
	Standby		Shift + Power		Scene 2		Shift + Green
	USB		1		Scene 3		Shift + Yellow
	CD		2		Scene 4		Shift + Blue
	MD/CD-R		3		Level		D. Menu
	TUNER		4		Menu		Menu
	DVD		5		Return		Back
	DTV/CBL		6		Display		Info
	DVR		7		Up		Up
	V-AUX/DOCK		8		Down		Down
	A		Red		Right		Right
	B		Green		Left		Left
	C		Yellow		Enter		Ok
	D		Blue		Prog-		Ch -
	Mute		Mute		Prog+		Ch +
	Volume+		Vol +		Enhancer		Shift + 1
	Volume-		Vol -		Sur. Decode		Shift + 2




















 
 

 
 



 




 


 
 
 
 

 




 


 
 
 

 



 




 


 
 

 


Original	Rechange
 Power AV	 Power
 Mute	 Mute
 Volume+	 Vol +
 Volume-	 Vol -
 Band	 Smart
 Menu	 Menu
 Return	 Back
 Display	 Shift + Info
 Preset+	 Up
 Preset-	 Down
 A/B/C/D/E+	 Right
 A/B/C/D/E-	 Left
 Enter	 Ok
 Info	 Info
 EON	 Media
 PTY SEEK Mode	 Ch -
 PTY SEEK Start	 Ch +

Original	Rechange
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ENT	 Pre Ch



 


Original		Rechange		Original		Rechange	
	Power AV		Power		<<		<<
	Mute		Mute		>>		>>
	Volume+		Vol +		l<<		l<<
	Volume-		Vol -		>>l		>>l
	Title		Smart		1		1
	Menu		Menu		2		2
	Return		Back		3		3
	Display		Info		4		4
	Up		Up		5		5
	Left		Left		6		6
	Enter		Ok		7		7
	Right		Right		8		8
	Down		Down		9		9
	Rec		Rec		0		0
	Stop		Stop		+10		Guide
	Pause		Pause		SLEEP		Pre Ch
	Play		Play				





Original	Rechange
 Power AV	 Power
 Mute	 Mute
 Volume+	 Vol +
 Volume-	 Vol -
 Title	 Smart
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Return	 Back
 Display	 Info
 Rec	 Rec
 Stop	 Stop
 Pause	 Pause
 Play	 Play

Original	Rechange
 <<	 <<
 >>	 >>
 <<	 <<
 >>	 >>
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 ENT	 Pre Ch

