



Original	Rechange
Open/Close	Eject / Surround
Power	Power
Red/Zoom	Red / Netflix / Search
Green/Program	Green / APP / Repeat
Yellow/Shuffle	Yellow / YouTube / Repeat
Blue/Repeat	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Exit / Cancel / Clear

Original	Rechange
Search	Shift + Red / Netflix /
Repeat A/B	Shift + Green / APP /
Subtitle	Subtitle / EQ
Angle	Info / Angle
Audio	Audio / Lang I/II
PIP	Picture / Format
2nd Audio	Mute / Dimmer
Miracast	Shift + Display / Media
Home	Menu / Home
YouTube	Shift + Yellow / YouTube /
Vidi	Text / Goto
Top Menu	D.Menu / Top
Pop-Up Menu	Smart / List
Return	Shift + Back / Return
On Screen	Display / Media
Up	Up
Down	Down





Original	Rechange	Original	Rechange
	Left		Left
	Right		Right
	Enter		OK
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	<<		CH- / Page-
	>>		CH+ / Page+
	<<		<< / Tune-
	>>		>> / Tune+
	Setup		Setup / OPT /
	Status		Back / Return
	<<		<< / Preset-
	>>		>>  / Preset+

