 



 

 

 











 

 



 











 


 
Original	Rechange
 Standby Receiver	 Power
 Mute	 Mute / Dimmer
 Play/Memory	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 ENT	 Rec / Rec Mode
 << Tuning	 << / Tune-
 >> Tuning	 >> / Tune+
 I<< Preset	 I<< / Preset-
 >>I Preset	 >>I / Preset+
 Audio2	 Sound / Title
 Music	 Audio / Lang I/II
 Sur Decode	 Subtitle / EQ
 Direct	 Eject / Surround
 NET Scene	 Picture / Format
 Radio Scene	 Zoom / Size
 Sleep	 Sleep / Timer

Original	Rechange
 Straight	 TV/Radio /
 Pop Up/Menu	 D.Menu / Top
 Setup	 Setup / OPT /
 Movie	 Text / Goto
 Enhancer	 AV / Input / RDS
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Vol+	 Vol+
 Mode	 Smart / List
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media







 


 
 


 



 












 
 


















Original	Rechange
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/--
 0	 0
 Party	 Fav / Marker / PC
 Audio1	 Red / Netflix / Search
 NET	 Green / APP / Repeat
 FM	 Yellow / YouTube / Repeat
 AM	 Blue / Prime Video / Random

Original	Rechange
 Standby Source	 Shift + Power
 Top Menu	 Shift + D.Menu / Top Menu
 Option	 Shift + Setup / OPT / Tools
 BD/DVD Scene	 Shift + Text /
 TV Scene	 Shift + AV / Input / RDS
 V-AUX	 Shift + Smart / List
 HDMI1	 Shift + 1
 HDMI2	 Shift + 2
 HDMI3	 Shift + 3
 HDMI4	 Shift + 4
 HDMI5	 Shift + 5
 AV1	 Shift + 6
 AV2	 Shift + 7
 AV3	 Shift + 8
 AV4	 Shift + 9
 AV5	 Shift + Guide / EPG / -/--
 USB	 Shift + Fav / Marker / PC





Original	Recharge
 Standby Receiver	 Power
 Standby Source	 Shift + Power
 HDMI1	 Shift + 1
 HDMI2	 Shift + 2
 HDMI3	 Shift + 3
 HDMI4	 Shift + 4
 HDMI5	 Shift + 5
 AV1	 Shift + 6
 AV2	 Shift + 7
 AV3	 Shift + 8
 AV4	 Shift + 9
 AV5	 Shift + Guide / EPG / -/-
 Audio1	 Red / Netflix / Search
 Audio2	 Sound / Title
 V-AUX	 Shift + Smart / List
 NET	 Green / APP / Repeat
 USB	 Shift + Fav / Marker / PC

Original	Recharge
 FM	 Yellow / YouTube / Repeat
 AM	 Blue / Prime Video / Random
 Party	 Fav / Marker / PC
 BD/DVD Scene	 Text / Goto
 TV Scene	 AV / Input / RDS
 NET Scene	 Picture / Format
 Radio Scene	 Zoom / Size
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Top Menu	 Shift + D.Menu / Top Menu
 Pop Up/Menu	 D.Menu / Top
 Setup	 Setup / OPT /
 Option	 Shift + Setup / OPT / Tools
 Return	 Back / Return
 Display	 Display / Media
 Up	 Up





	Original	Rechange	Original	Rechange
	Down			4
	Right			5
	Left			6
	Enter			7
	Mode			8
	Stop			9
	Pause			0
	Play/Memory			Guide / EPG / -/-
	<< Tuning			Rec / Rec Mode
	Tuning >>			
	I<< Preset			
	Preset >>I			
	Info			
	Sleep			
	1			
	2			
	3			

