































 







	Original	Rechange	Original	Rechange
	Bluetooth	 9		Pause / Step / Freeze
	Net	 Fav / Marker / PC		>> / Preset+
	Power	 Power		
	USB	 8		
	OPT	 Setup / OPT /		
	AUX	 7		
	Vol-	 Vol-		
	Vol+	 Vol+		
	Mute	 Mute / Dimmer		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	I<<	 I<< / Preset-		
	Play	 Play / Slow		

