
 



 

 
 




 

 




Original	Rechange	Original	Rechange
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift + Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow

Original	Rechange	Original	Rechange
 MUTE	 MUTE	 TV	 AUX
 MUTE	 MUTE	 DVD	 REC MODE
 1	 1	 SAT	 PLAY MODE
 2	 2	 AUX	 II
 3	 3	 ■	 ■
 4	 4	 ◀	 ◀
 5	 5	 ▶	 ▶
 6	 6	 ◀◀	 ◀◀
 7	 7	 ◀◀	 ◀◀
 8	 8	 ▶▶	 ▶▶
 9	 9	 ▶▶	 ▶▶
 0	 0	 LIST	 LIST
 FAV	 FAV	 DUAL	 DUAL
 Recall	 Recall	 SUBT	 SUBT
 GAME	 GAME	 OPT	 OPT
 AUTO	 AUTO	 PROG	 PROG
 INFO	 INFO	 SEARCH	 SEARCH
		 PICTURE	 PICTURE
		 ECO	 ECO
		 3D	 3D
		 TIMER	 TIMER
		 AV	 AV
		 E-MANUAL	 E-MANUAL
		 REPEAT	 REPEAT
		 ZOOM	 ZOOM
		 TEXT	 TEXT
		 ▲	 ▲
		 ▼	 ▼
		 ◀	 ◀
		 ▶	 ▶
		 OK	 OK
		 MENU	 MENU
		 INFO	 INFO
		 CLEAR	 CLEAR
		 EXIT	 EXIT
		 RETURN	 RETURN
		 BACK	 BACK
		 +	 +
		 HOME	 HOME
		 SMART	 SMART
		 APP	 APP
		 MEDIA	 MEDIA
		 +	 +
		-	-
		1	1
		2	2
		3	3
		4	4
		5	5
		6	6
		7	7
		8	8
		9	9
		GUIDE	GUIDE
		0	0
		PRE-CH	PRE-CH
		A	A
		B	B
		C	C
		D	D



Play/Pause

