

















 





 
















Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG	 Guide / EPG / -/--
 Rec	 Rec / Rec Mode
 Info	 Info / Angle
 Vol+	 Vol+
 Vol-	 Vol-

Original	Rechange
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 ≡	 D.Menu / Top
 Input	 AV / Input / RDS
 Smart Colors	 Display / Media
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 BACK	 Back / Return
 EXIT	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Home	 Menu / Home
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Original	Recharge
<<	<< / Tune-
>>	>> / Tune+
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Subt	Subtitle / EQ
Audio	Audio / Lang I/II
TXT	Text / Goto
Netflix	Shift + Red / Netflix /
YouTube	Shift + Yellow / YouTube /
prime video	Shift + Blue / Prime
Google Play	Shift + Green / APP /

Original	Recharge

