 







 







 







 






 































 








	Original	Rechange		Original	Rechange
	Power		Power		Shift + Guide / EPG / -/--
	Mute		Mute / Dimmer		Jump
	Source		AV / Input / RDS		Menu
	P.Mode		Picture / Format		Info
	S.Mode		Sound / Title		Sleep
	I/II/Audio		Audio / Lang I/II		Exit
	P.Size		Zoom / Size		Up
	1		1		Left
	2		2		Enter
	3		3		Right
	4		4		Down
	5		5		Vol+
	6		6		Vol-
	7		7		P-
	8		8		P+
	9		9		Red / D.Setup
	0		0		Red / D.Setup
					Shift + Guide / EPG / -/--
					Smart / List
					Menu / Home
					Info / Angle
					Sleep / Timer
					Exit / Cancel / Clear
					Up
					Left
					OK
					Right
					Down
					Vol+
					Vol-
					CH- / Page-
					CH+ / Page+
					Red / Netflix / Search
					Setup / OPT /



