





 
 


 

 
 



 
 



 



 

 
 
 


 



















 




 

 






Original		Rechange		Original		Rechange	
	Power		Power		[Z]		Format
	Open/Close		Eject		Camera		3D
	[]X		Smart		(Z)))))		Dual
	EQ		Media		Time		AV
	Mute		Mute		Prog		Sleep
	→[]←		Subt		Setup/Mem		Options
	1		1		Title		List
	2		2		Menu/PBC		Menu
	3		3		Return/Exit		Back
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right/FAV+		Right
	7		7		Left/FAV-		Left
	8		8		Enter		Ok
	9		9		Function		Pre Ch
	0		0		Tv/Radio		TV/R
	+10		Guide		DVD		D. Menu



Source/Auto



Original		Rechange		Original		Rechange	
	Stop		Stop				
	Play/Pause		Play				
	Slow		Pause				
	Info		Info				
	<</Tuning-		<<				
	>>/Tuning+		>>				
	I<</Channel-		I<<				
	>>I/Channel+		>>I				
	Teletext		Text				
	EPG		Shift + Guide				
	Vol+		Vol +				
	Vol-		Vol -				
	Red/Repeat		Red				
	Green/A-B		Green				
	Yellow/Zoom		Yellow				
	Blue/Clear		Blue				

