







 






 

 

 



 



 







 




 

 

 





 

 









 



 

 












 
 
 





Original		Rechange		Original		Rechange	
	Power		Power		V-		Vol -
	Source		AV		P+		Ch +
	1		1		P-		Ch -
	2		2		[G]		Guide
	3		3		i		Info
	4		4		Back		Back
	5		5		Exit		Exit
	6		6		OK		Ok
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	TXT		Text		Netflix		Media
	Lang		Dual		YouTube		Smart
	Mute		Mute		Prime Video		Shift + Smart
	Home		Menu		*1		Format
	V+		Vol +		Red		Red





Original	Recharge	Original	Recharge
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

