



 





















Original		Rechange		Original		Rechange	
	Standby		Power				
	Mute		Mute / Dimmer				
	Sub Pair		Smart / List				
	Bluetooth Play/Pause		Play / Slow				
	Bluetooth >>I		>>I / Preset+				
	Bluetooth I<<		I<< / Preset-				
	Input		AV / Input / RDS				
	Master Vol+		Vol+				
	Master Vol-		Vol-				
	Sub+		CH+ / Page+				
	Sub-		CH- / Page-				

