Mandis shop

RM-SC1

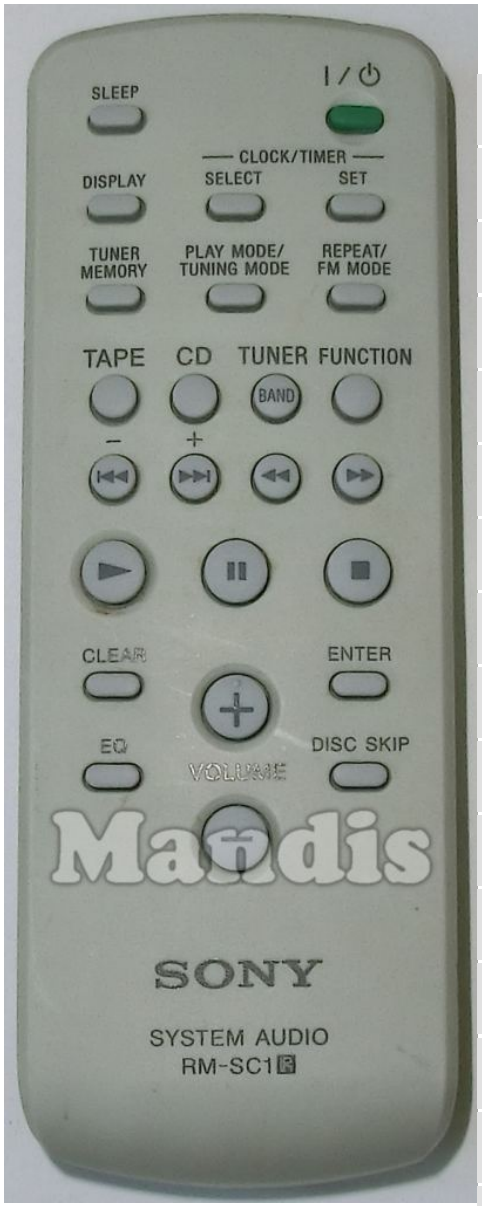

Original		Rechange	
I / ⏻	Power	⏻	Power
SLEEP	Sleep	PROG SLEEP	Sleep
DISPLAY	Display	DISPLAY INFO	Info
SELECT	Select	-/-- GUIDE	Guide
SET	Set Clock/Timer	FAV PRE-CH	Pre Ch
TUNER MEMORY	Tuner Memory	7	7
PLAY MODE/ TUNING MODE	Play Mode/Tuning Mode	8	8
REPEAT/ FM MODE	Repeat/FM	9	9
TAPE	Tape	1	1
CD	CD	2	2
TUNER BAND	Band/Tuner	3	3
FUNCTION	Funtion	TOP MENU MENU	Menu
− ⏮	I<<	⏮	I<<
+ ⏭	>>I	⏭	>>I
◀◀	<<	◀◀	<<
▶▶	>>	▶▶	>>
▶	Play	PLAY MODE ▶	Play

Original		Rechange	
⏸	Pause	⏸	Pause
■	Stop	■	Stop
CLEAR	Clear	CLEAR EXIT	Exit
EQ	EQ	SETTINGS OPT	Options
ENTER	Enter	OK	Ok
DISC SKIP	Disc Skip	SEARCH TV/R	TV/R
+	Vol+	+ VOL	Vol +
−	Vol-	VOL −	Vol -

https://tout-telecommandes.fr/fr/Sony/1039350-6028-telecommande-de-remplacement-pour-Sony-RMSC1-147851911.html