Mandis shop

00D3991080000

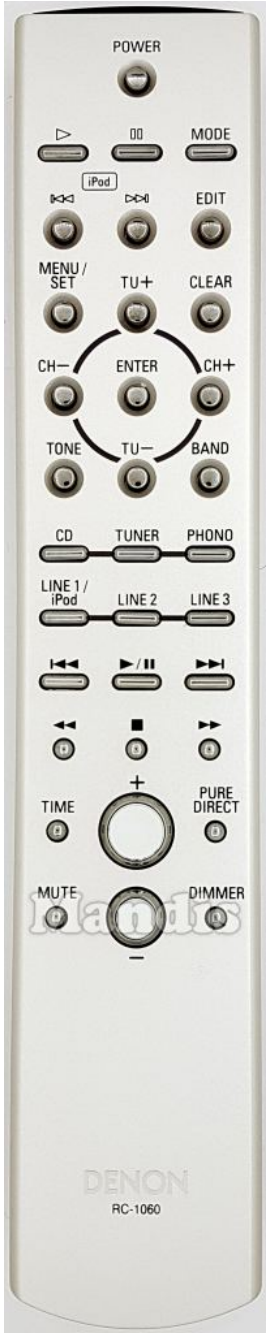

Original		Rechange	
POWER	Power		Power
iPod	Play iPod	SHIFT + PLAY MODE	Shift + Play
iPod	Pause iPod		Pause
iPod	>>I iPod		Right
iPod	I<< iPod		Left
MODE	Mode	SETTINGS OPT	Options
EDIT	Edit	RETURN BACK	Back
MENU / SET	Menu/Set	TOP MENU MENU	Menu
CLEAR	Clear	CLEAR EXIT	Exit
TONE	Tone	DISPLAY INFO	Info
BAND	Band	SEARCH TV/R	TV/R
TU+	Tu+		Up
TU−	Tu-		Down
CH+	CH+	+ CH	Ch +
CH−	CH-	CH −	Ch -
ENTER	Enter	OK	Ok
CD	CD	D	Blue

Original		Rechange	
TUNER	Tuner	HOME SMART	Smart
PHONO	Phono	APP MEDIA	Media
LINE 1 / iPod	Line1/iPod	A	Red
LINE 2	Line 2	B	Green
LINE 3	Line 3	C	Yellow
I<<	I<<	I<<	I<<
▶/II	Play/Pause	PLAY MODE ▶	Play
>>I	>>I	>>I	>>I
<<	<<	<<	<<
■	Stop	■	Stop
>>	>>	>>	>>
TIME	Time	TIMER AV	AV
PURE DIRECT	Pure Direct	AD SUBT	Subt
DIMMER	Dimmer	SOUND DUAL	Dual
+	Vol +	+ VOL	Vol +
−	Vol -	VOL −	Vol -
MUTE	Mute	MUTE	Mute

https://tout-telecommande.fr/fr/10908-109-telecommande-remplacement-pour-RC-1060-00D3991080000.html