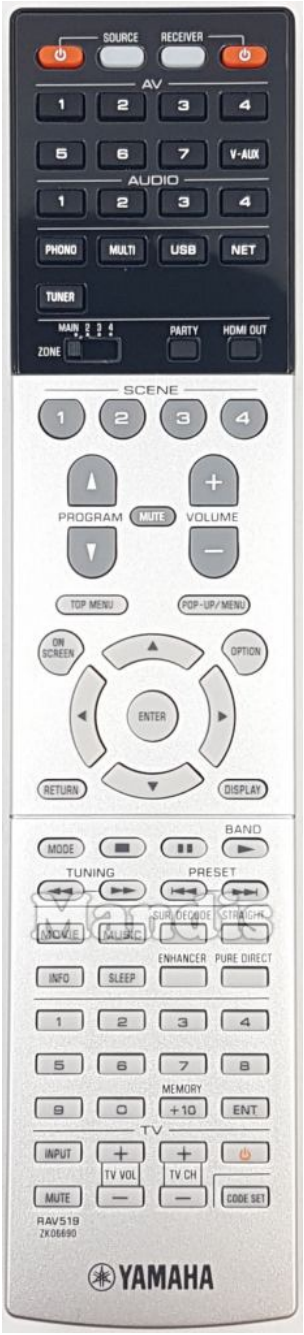

Original		Rechange	
	Power Receiver		Power
	Power Source	SHIFT +	Shift + Power
1	AV1	SHIFT + TV 1	Shift + 1
2	AV2	SHIFT + DVD 2	Shift + 2
3	AV3	SHIFT + CD-STB 3	Shift + 3
4	AV4	SHIFT + VIDEO 4	Shift + 4
5	AV5	SHIFT + TAPE 5	Shift + 5
6	AV6	SHIFT + TUNER 6	Shift + 6
7	AV7	SHIFT + AUX-HDD 7	Shift + 7
V-AUX	V-AUX	SHIFT + USB 8	Shift + 8
1	Audio 1	SHIFT + BLUETOOTH 9	Shift + 9
2	Audio 2	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
3	Audio 3	SHIFT + HDMI-SAT 0	Shift + 0
4	Audio 4	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
PHONO	Phono	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
MULTI	Multi	SHIFT + APP REPEAT	Shift + Green / APP /
USB	USB	SHIFT + Prime Video RANDOM	Shift + Blue / Prime Video / Random

Original		Rechange	
NET	Net	SHIFT + LIST SMART	Shift + Smart / List
TUNER	Tuner	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
PARTY	Party	LIST SMART	Smart / List
HDMI OUT	HDMI Out	RDS AV INPUT	AV / Input / RDS
1	Scene 1	NETFLIX SEARCH	Red / Netflix / Search
2	Scene 2	APP REPEAT	Green / APP / Repeat
3	Scene 3	YouTube REPEAT A-B	Yellow / YouTube / Repeat
4	Scene 4	Prime Video RANDOM	Blue / Prime Video / Random
PROGRAM	Program Up	CH PAGE +	CH+ / Page+
PROGRAM	Program Down	CH PAGE −	CH- / Page-
VOLUME +	Volume+	VOL +	Vol +
VOLUME −	Volume-	VOL −	Vol -
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
POP-UP/MENU	Pop-Up Menu	HOME MENU	Menu / Home
ON SCREEN	On Screen	SIZE ZOOM	Zoom / Size
OPTION	Option	OPT-TOOLS SETUP	Setup / OPT / Tools

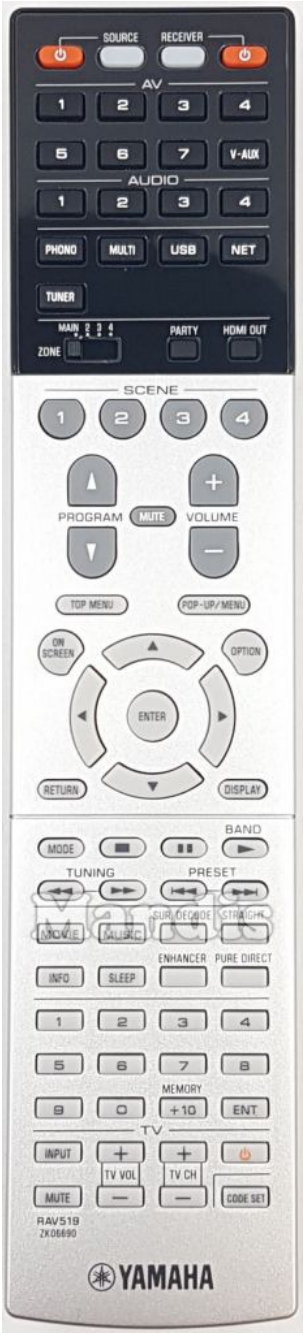

Original		Rechange		Original		Rechange	
RETURN	Return	RETURN BACK	Back / Return	SUR. DECODE	Sur Decode	SURROUND	Eject / Surround
DISPLAY	Display	MEDIA DISPLAY	Display / Media	STRAIGHT	Straight	TITLE SOUND	Sound / Title
▲	Up	▲	Up	INFO	Info	ANGLE INFO	Info / Angle
▼	Down	▼	Down	SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
▶	Right	▶	Right	ENHANCER	Enhancer	GOTO TEXT	Text / Goto
◀	Left	◀	Left	PURE DIRECT	Pure Direct	PROGRAM TV/ RADIO	TV/ Radio /
ENTER	Enter	OK	OK	1	1	TV 1	1
MODE	Mode	FORMAT PICTURE	Picture / Format	2	2	DVD 2	2
■	Stop	HOLD ■	Stop / Hold	3	3	CD - STB 3	3
❚❚	Pause	STEP - FREEZE ❚❚	Pause / Step / Freeze	4	4	VIDEO 4	4
BAND ▶	Play/ Band	SLOW ▶	Play / Slow	5	5	TAPE 5	5
◀◀	<< Tuning	TUNE- ◀◀	<< / Tune-	6	6	TUNER 6	6
▶▶	Tuning >>	TUNE+ ▶▶	>> / Tune+	7	7	AUX - HDD 7	7
⏮	I << Preset	PRESET- ⏮	I << / Preset-	8	8	USB 8	8
⏭	Preset >>I	PRESET+ ⏭	>>I / Preset+	9	9	BLUETOOTH 9	9
MOVIE	Movie	EQ SUBTITLE	Subtitle / EQ	0	0	HDMI - SAT 0	0
MUSIC	Music	LANG I/II AUDIO	Audio / Lang I/II	MEMORY +10	+10/ Memory	-/-- GUIDE EPG	Guide / EPG / -/--

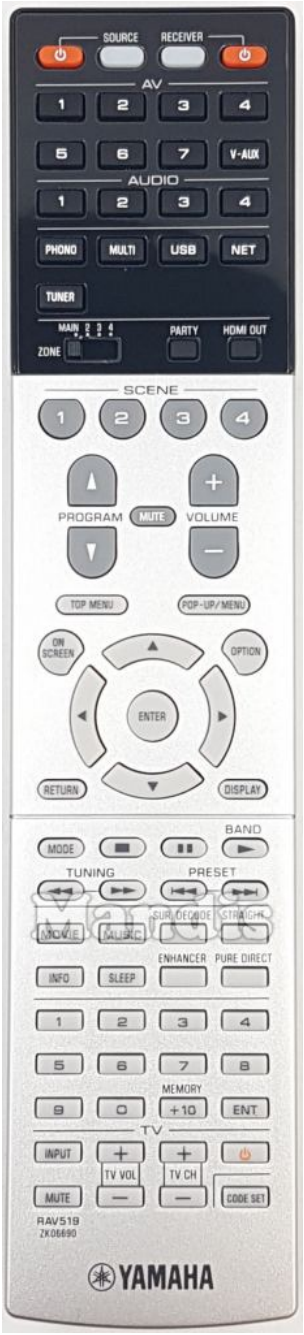

Original	Rechange	Original	Rechange
ENT.	Fav / Marker / PC		

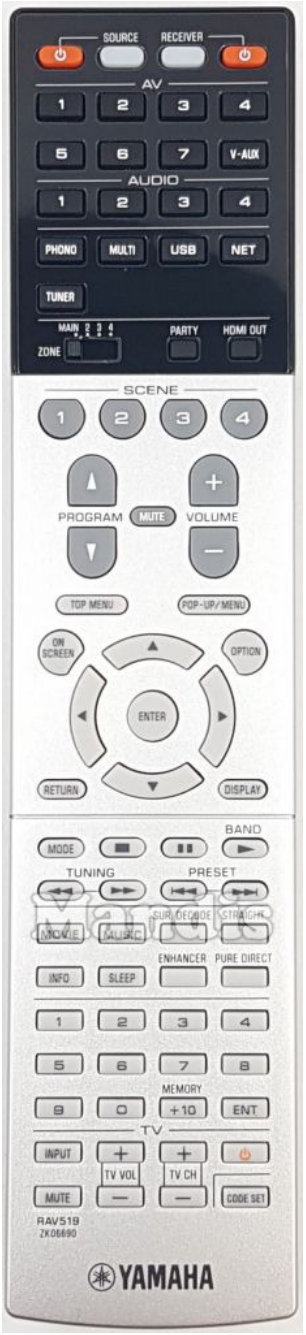

Original		Rechange	
	Power Receiver		Power
	Power Source	SHIFT +	Shift + Power
1	AV1	SHIFT + TV 1	Shift + 1
2	AV2	SHIFT + DVD 2	Shift + 2
3	AV3	SHIFT + CD-STB 3	Shift + 3
4	AV4	SHIFT + VIDEO 4	Shift + 4
5	AV5	SHIFT + TAPE 5	Shift + 5
6	AV6	SHIFT + TUNER 6	Shift + 6
7	AV7	SHIFT + AUX-HDD 7	Shift + 7
V-AUX	V-AUX	SHIFT + USB 8	Shift + 8
1	Audio 1	SHIFT + BLUETOOTH 9	Shift + 9
2	Audio 2	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
3	Audio 3	SHIFT + HDMI-SAT 0	Shift + 0
4	Audio 4	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
PHONO	Phono	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
NET	Net	SHIFT + LIST SMART	Shift + Smart / List
USB	USB	SHIFT + Prime Video RANDOM	Shift + Blue / Prime Video / Random

Original		Rechange	
TUNER	Tuner	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
PARTY	Party	LIST SMART	Smart / List
HDMI OUT	HDMI Out	RDS AV INPUT	AV / Input / RDS
1	Scene 1	NETFLIX SEARCH	Red / Netflix / Search
2	Scene 2	APP REPEAT	Green / APP / Repeat
3	Scene 3	YouTube REPEAT A-B	Yellow / YouTube / Repeat
4	Scene 4	Prime Video RANDOM	Blue / Prime Video / Random
	Mute	DIMMER MUTE	Mute / Dimmer
+ VOLUME	Volume+	+ VOL	Vol +
VOLUME −	Volume-	VOL −	Vol -
POP-UP/MENU	Pop-Up Menu	HOME MENU	Menu / Home
TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
OPTION	Option	OPT-TOOLS SETUP	Setup / OPT /
DISPLAY	Display	MEDIA DISPLAY	Display / Media
RETURN	Return	RETURN BACK	Back / Return
ON SCREEN	On Screen	SIZE ZOOM	Zoom / Size
	Up		Up

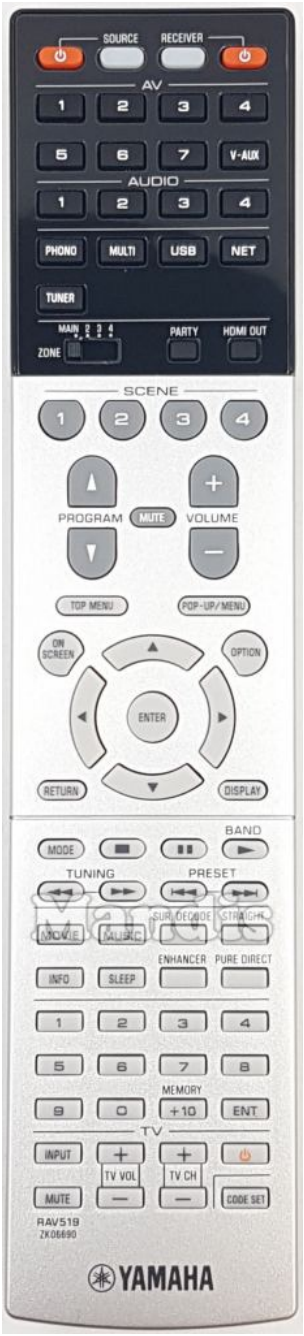

Original		Rechange	
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
	<< Tuning	TUNE-	<< / Tune-
	Tuning >>	TUNE+	>> / Tune+
	I<< Preset	PRESET-	I<< / Preset-
	Preset >>I	PRESET+	>>I / Preset+
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Rechange	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC

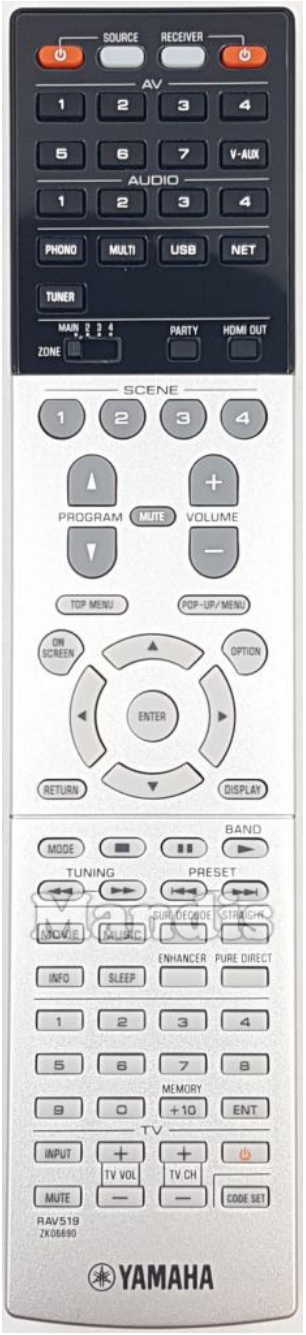

Original		Rechange	
	Power Receiver		Power
	Power Source	SHIFT +	Shift + Power
1	AV1	SHIFT + TV 1	Shift + 1
2	AV2	SHIFT + DVD 2	Shift + 2
3	AV3	SHIFT + CD-STB 3	Shift + 3
4	AV4	SHIFT + VIDEO 4	Shift + 4
5	AV5	SHIFT + TAPE 5	Shift + 5
6	AV6	SHIFT + TUNER 6	Shift + 6
7	AV7	SHIFT + AUX-HDD 7	Shift + 7
V-AUX	V-AUX	SHIFT + USB 8	Shift + 8
1	Audio 1	SHIFT + BLUETOOTH 9	Shift + 9
2	Audio 2	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
3	Audio 3	SHIFT + HDMI-SAT 0	Shift + 0
4	Audio 4	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
PHONO	Phono	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
USB	USB	SHIFT + Prime Video RANDOM	Shift + Blue / Prime
NET	Net	SHIFT + LIST SMART	Shift + Smart / List

Original		Rechange	
TUNER	Tuner	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
PARTY	Party	LIST SMART	Smart / List
HDMI OUT	HDMI Out	RDS AV INPUT	AV / Input / RDS
1	Scene 1	NETFLIX SEARCH	Red / Netflix / Search
2	Scene 2	APP REPEAT	Green / APP / Repeat
3	Scene 3	YouTube REPEAT A-B	Yellow / YouTube / Repeat
4	Scene 4	Prime Video RANDOM	Blue / Prime Video / Random
+ VOLUME	Volume+	+ VOL	Vol +
VOLUME −	Volume -	VOL −	Vol -
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
POP-UP/MENU	Pop-Up Menu	HOME MENU	Menu / Home
TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
INFO	Info	ANGLE INFO	Info / Angle
OPTION	Option	OPT-TOOLS SETUP	Setup / OPT /
RETURN	Return	RETURN BACK	Back / Return
ON SCREEN	On Screen	SIZE ZOOM	Zoom / Size
ENTER	Enter	OK	OK

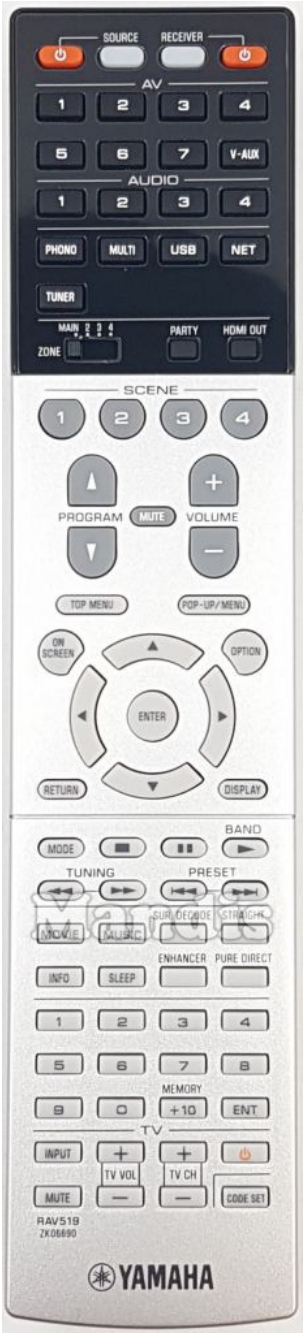

Original		Rechange		Original		Rechange	
DISPLAY	Display	MEDIA DISPLAY	Display / Media	4	4	VIDEO 4	4
▲	Up	▲	Up	5	5	TAPE 5	5
▼	Down	▼	Down	6	6	TUNER 6	6
▶	Right	▶	Right	7	7	AUX-HDD 7	7
◀	Left	◀	Left	8	8	USB 8	8
MODE	Mode	FORMAT PICTURE	Picture / Format	9	9	BLUETOOTH 9	9
■	Stop	HOLD ■	Stop / Hold	0	0	HDMI-SAT 0	0
❚❚	Pause	STEP-FREEZE ❚❚	Pause / Step / Freeze	MEMORY +10	+10/ Memory	-/-- GUIDE EPG	Guide / EPG / -/--
BAND ▶	Play/ Band	SLOW ▶	Play / Slow	ENT	ENT	PC FAV MARKER	Fav / Marker / PC
◀◀	<< Tuning	TUNE- ◀◀	<< / Tune-				
▶▶	Tuning >>	TUNE+ ▶▶	>> / Tune+				
⏮	I << Preset	PRESET- ⏮	I << / Preset-				
⏭	Preset >>I	PRESET+ ⏭	>>I / Preset+				
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer				
1	1	TV 1	1				
2	2	DVD 2	2				
3	3	CD-STB 3	3				

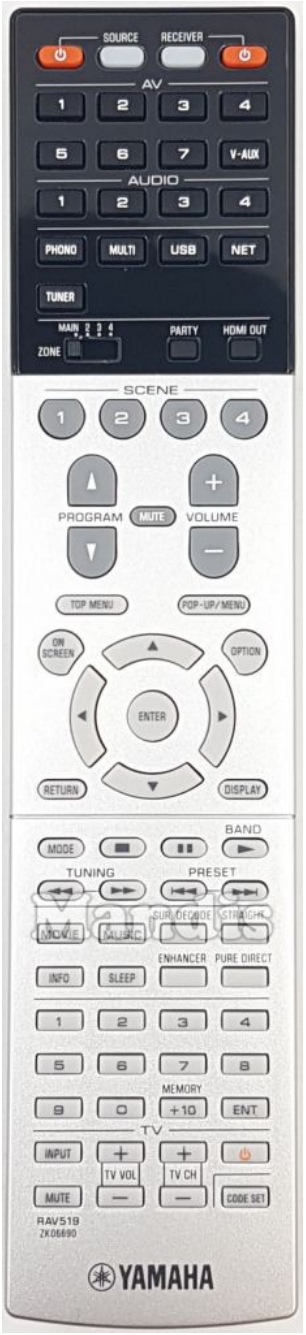

Original		Rechange	
	Power Receiver		Power
	Power Source	SHIFT +	Shift + Power
1	AV1	SHIFT + TV 1	Shift + 1
2	AV2	SHIFT + DVD 2	Shift + 2
3	AV3	SHIFT + CD-STB 3	Shift + 3
4	AV4	SHIFT + VIDEO 4	Shift + 4
5	AV5	SHIFT + TAPE 5	Shift + 5
6	AV6	SHIFT + TUNER 6	Shift + 6
7	AV7	SHIFT + AUX-HDD 7	Shift + 7
V-AUX	V-AUX	SHIFT + USB 8	Shift + 8
1	Audio 1	SHIFT + BLUETOOTH 9	Shift + 9
2	Audio 2	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
3	Audio 3	SHIFT + HDMI-SAT 0	Shift + 0
4	Audio 4	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
PHONO	Phono	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /
USB	USB	SHIFT + Prime Video RANDOM	Shift + Blue / Prime
NET	Net	SHIFT + LIST SMART	Shift + Smart / List

Original		Rechange	
TUNER	Tuner	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /
PARTY	Party	LIST SMART	Smart / List
HDMI OUT	HDMI Out	RDS AV INPUT	AV / Input / RDS
1	Scene 1	NETFLIX SEARCH	Red / Netflix / Search
2	Scene 2	APP REPEAT	Green / APP / Repeat
3	Scene 3	YouTube REPEAT A-B	Yellow / YouTube / Repeat
4	Scene 4	Prime Video RANDOM	Blue / Prime Video / Random
+ VOLUME	Volume+	+ VOL	Vol +
VOLUME −	Volume-	VOL −	Vol -
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
POP-UP/MENU	Pop-Up Menu	HOME MENU	Menu / Home
ON SCREEN	On Screen	SIZE ZOOM	Zoom / Size
OPTION	Option	OPT-TOOLS SETUP	Setup / OPT /
RETURN	Return	RETURN BACK	Back / Return
DISPLAY	Display	MEDIA DISPLAY	Display / Media
	Up		Up

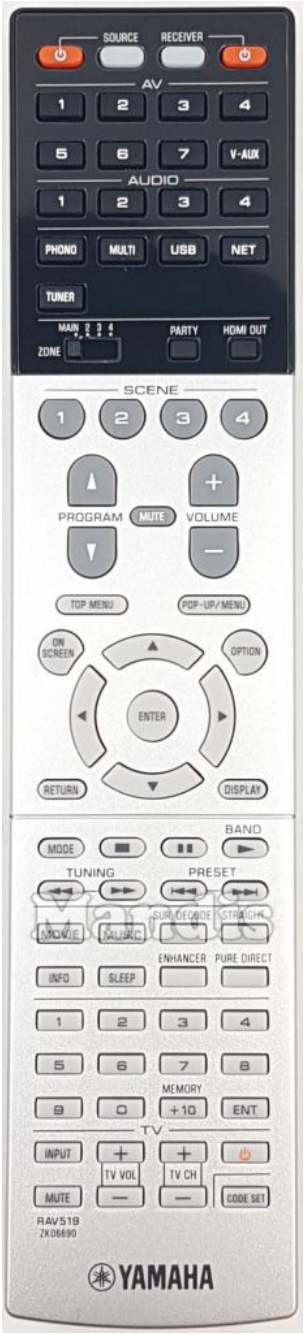

Original		Rechange	
	Down		Down
	Right		Right
	Left		Left
ENTER	Enter	OK	OK
MODE	Mode	FORMAT PICTURE	Picture / Format
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/ Band	SLOW	Play / Slow
	<< Tuning	TUNE-	<< / Tune-
	Tuning >>	TUNE+	>> / Tune+
	I << Preset	PRESET-	I << / Preset-
	Preset >>I	PRESET+	>>I / Preset+
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3

Original		Rechange	
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/ Memory	-/-- GUIDE EPG	Guide / EPG / -/--
ENT	ENT	PC FAV MARKER	Fav / Marker / PC