Mandis shop

Yamaha VR50590

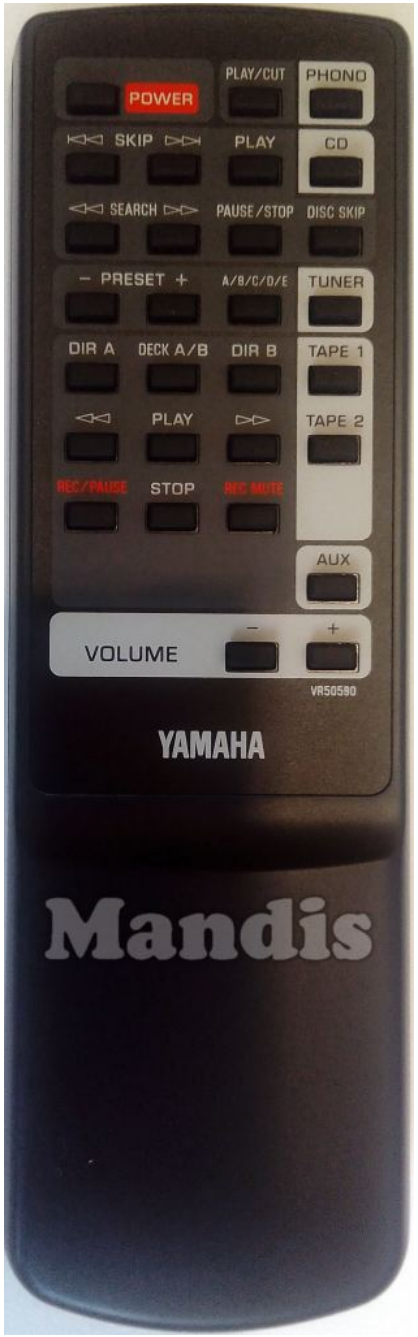

Original		Rechange	
POWER	Power	Power	
PLAY/CUT	Play/Cut Phono	SLOW ▶	Play / Slow
PHONO	Phono	TITLE SOUND	Sound / Title
SK	I<< Skip CD	PRESET- ⏮	I<< / Preset-
KIP	Skip >>I CD	PRESET+ ⏭	>>I / Preset+
PLAY	Play CD	SHIFT + TITLE SOUND	Shift + Sound / Title
CD	CD	CD-STB 3	3
SEA	<< Search CD	SHIFT + TUNE- ◀◀	Shift + << /
ARCH	Search >> CD	TUNE+ ▶▶	>> / Tune+
PAUSE/STOP	Pause/Stop CD	STEP-FREEZE ⏸	Pause / Step / Freeze
DISC SKIP	Disc Skip CD	SHIFT + CD-STB 3	Shift + 3
– PRE	Preset - Tuner	LANG I/II AUDIO	Audio / Lang I/II
SET +	Preset+ Tuner	SHIFT + PRESET+ ⏭	Shift + >>I / Preset+
A/B/C/D/E	A/B/C/D/E Tuner	YouTube REPEAT A-B	Yellow / YouTube / Repeat
TUNER	Tuner	TUNER 6	6
DIR A	DIR A Tape	USB 8	8
DECK A/B	Deck A/B Tape	TAPE 5	5

Original		Rechange	
DIR B	DIR B Tape	SHIFT + TAPE 5	Shift + 5
TAPE 1	Tape 1	TV 1	1
◀◀	<< Tape	TUNE- ◀◀	<< / Tune-
PLAY	Play Tape	SHIFT + SLOW ▶	Shift + Play /
▶▶	>> Tape	SHIFT + TUNE+ ▶▶	Shift + >> /
TAPE 2	Tape 2	DVD 2	2
REC/PAUSE	Rec Pause Tape	SHIFT + REC MODE ●	Shift + Rec / Rec Mode
STOP	Stop Tape	HOLD ■	Stop / Hold
REC MUTE	Rec Mute Tape	REC MODE ●	Rec / Rec Mode
AUX	AUX	AUX-HDD 7	7
–	Vol-	VOL –	Vol-
+	Vol+	+ VOL	Vol+

https://tout-telecommandes.fr/fr/Yamaha/1056449-18050-telecommande-de-remplacement-pour-Yamaha-VR50590-VR505900.html