Mandis shop

Yamaha VQ086200

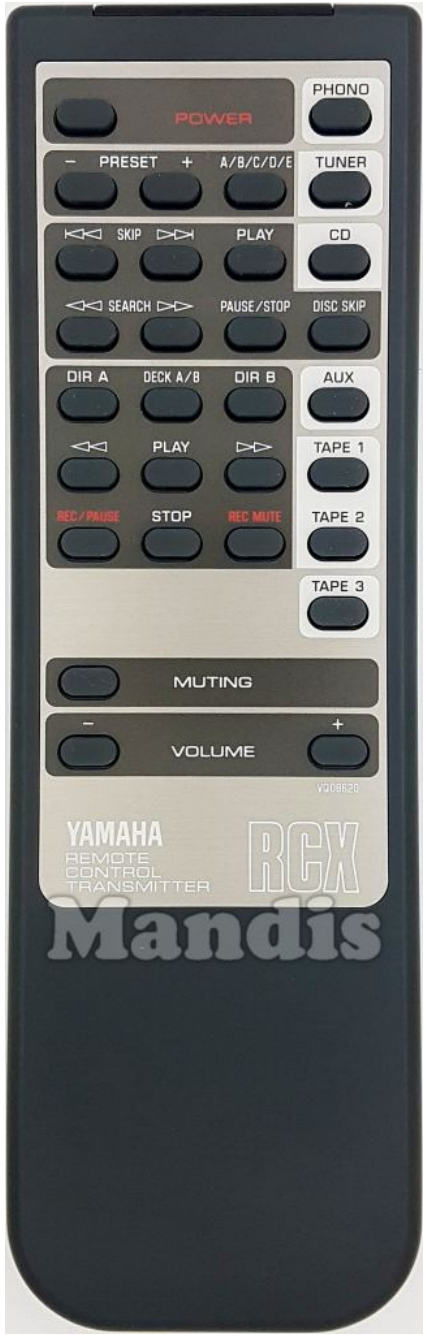

Original		Rechange	
POWER	Power	POWER	Power
PHONO	Phono	HOME SMART	Smart
TUNER	Tuner	OK	Ok
A/B/C/D/E	A/B/C/D/E	DISPLAY INFO	Info
PRESET +	Preset+	+ CH	Ch +
PRESET −	Preset-	CH −	Ch -
CD	CD	APP MEDIA	Media
PLAY	Play CD	PLAY MODE ▶	Play
SKIP ⊳⊳I	Skip >>I CD	⊳⊳I	>>I
I⊲⊲ SKIP	I<< Skip CD	I⊲⊲	I<<
SEARCH ⊳⊳	Search >> CD	⊳⊳	>>
⊲⊲ SEARCH	<< Search CD	⊲⊲	<<
PAUSE/STOP	Pause/Stop CD	II	Pause
DISC SKIP	Disc Skip CD	RETURN BACK	Back
AUX	AUX	A	Red
TAPE 1	Tape 1	B	Green
TAPE 2	Tape 2	C	Yellow

Original		Rechange	
TAPE 3	Tape 3	D	Blue
DIR A	Dir A Tape	SETTINGS OPT	Options
DECK A/B	Deck A/B Tape	SOUND DUAL	Dual
DIR B	Dir B Tape	AD SUBT	Subt
⊲⊲	<< Tape	SHIFT + ⊲⊲	Shift + <<
⊳⊳	>> Tape	SHIFT + ⊳⊳	Shift + >>
PLAY	Play Tape	SHIFT + PLAY MODE ▶	Shift + Play
REC/PAUSE	Rec/Pause Tape	REC MODE ●	Rec
STOP	Stop Tape	■	Stop
REC MUTE	Rec Mute Tape	SEARCH TV/R	TV/R
VOLUME +	Vol+	+ VOL	Vol +
VOLUME −	Vol-	VOL −	Vol -
MUTING	Muting	MUTE	Mute

https://tout-telecommandes.fr/fr/Yamaha/1057442-81987-telecommande-de-remplacement-pour-Yamaha-VQ086200.html